

2.1.5. Fitting the oil sump

On the oil sump side, the tube for venting the oil sump should be lead around 5 mm into the oil sump (see sketch) and the other end should be lead into the centre of the overflow tank (see illustration).

If the oil sump vent tube is introduced into the oil sump to a depth in excess of 5 mm, it is possible, that oil will be pressured into the overflow tank.

Fig. 14

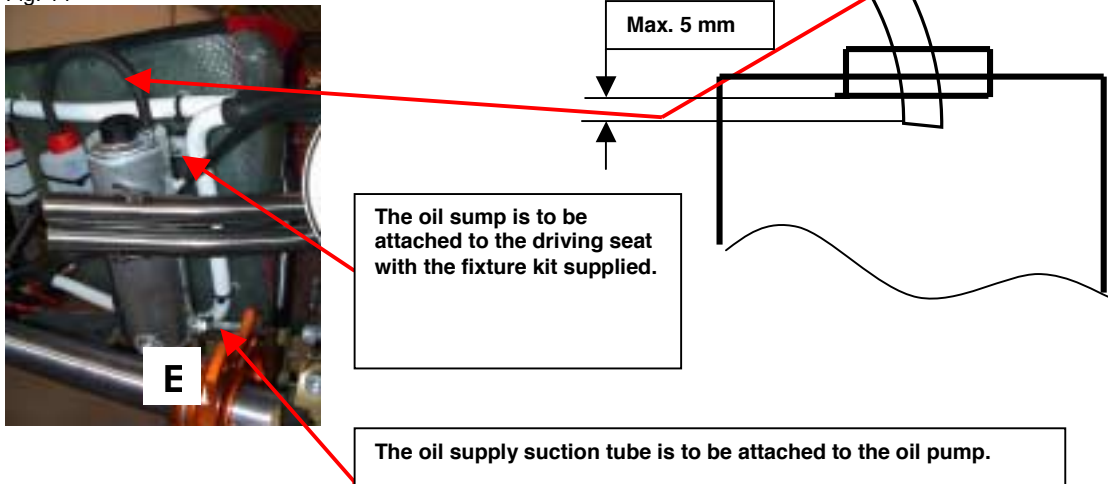


Fig. 15



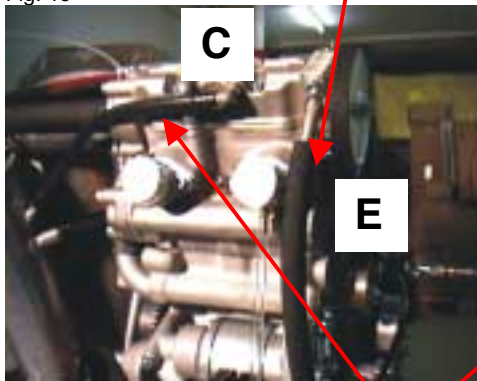


Fig. 16

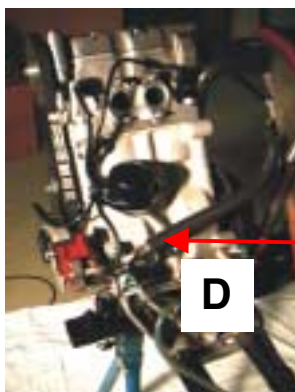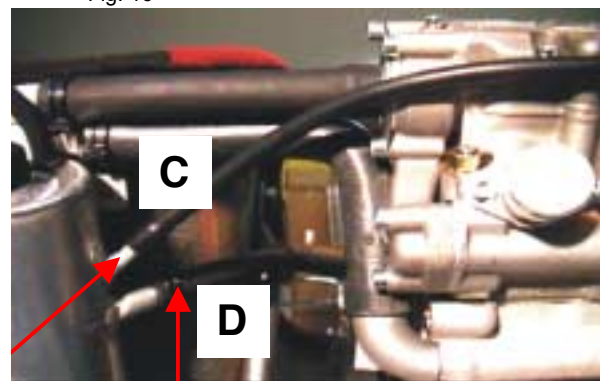

The engine vent tube has already been attached to the engine ex works.

The oil return tube should be fixed directly onto the engine block.

Fig. 17

The oil tubes between the engine and the oil sump should be attached from Points C to C, D to D and E to E.